



WWW.DIRECTUTOR.COM

Sherwood TV

Universal Remote Codes

3 digit codes:

136

4 digit codes:

0009 1399 0036123

5 digit codes:

11399 13061



Sherwood DVD

Universal Remote Codes

3 digit codes:

728 870 751 425 633

4 digit codes:

0741 0770 0213 3052 0633

1043 3925 0425 4225 0225

4065 1077 1889 0744 0768

0797 2049 2196 2407 2441

2121 2397 3454 0144 6141

6510 3375

5 digit codes:

23052

21043 23837 23925 20633

20770 21077

21889 31043 33925 52247

52209 50646